

Purpose

Technique RRSRESTS sets whether reservoir time series data are to be printed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

RRSRESTS(integer)

where integer is 1 or 0 specifying whether or not to print data

Example

RRSRESTS(1)

The reservoir time series data will be printed.